instruction sheet

SKOPE Refrigeration

Remote Counterline and Backbar: Unit Compartment Ventilation

The following instructions cover the retrofitting of a replacement unit compartment vented cover to SKOPE remote Counterline and Backbar cabinets. The replacement vented cover is fitted with a fan which draws air into the unit compartment.

To Fit the Replacement Unit Compartment Door:

1. Ensure the cabinet is disconnected from the mains power supply.	
2. Open the unit compartment door, by removing the bottom fixing screw and lifting the door up and pulling out.	
3. Remove the unit compartment door by loosening the two screws holding the bottom hinge in place. Once both screws have been loosened the door can be dropped off the top hinge and removed from the cabinet.	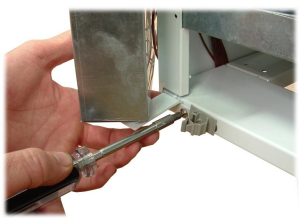
4. Fit the replacement unit compartment door onto both the cabinet hinges and tighten the two screws holding the bottom hinge in place.	
5. Connect the fan plug into the spare socket in the bottom of the control box on the front of the evaporator unit. Close the unit compartment door and refit the bottom fixing screw.	

PRN8060 Rev 1.0 April 2006 edition

Certified ISO 9001 by BVQI

SKOPE INDUSTRIES LIMITED
New Zealand Freephone: 0800 947 5673, Fax: (03) 983 3896. Australian Freephone: 1800 121 535, Freefax: 1800 121 533
Email: enquiry@skope.co.nz Website: www.skope.co.nz